

Internal SD Module	88
Installing the Internal SD Module	88
Removing the Internal SD Module	90
Internal SD Flash Card	90
Installing the Internal SD Flash Card	90
Removing the Internal SD Flash Card	91
Internal USB Memory Key	91
Internal USB Cable	93
Removing the Internal USB Cable	93
Installing the Internal USB Cable	93
Integrated Dell Remote Access Controller 6 (iDRAC6) Enterprise Card (Optional)	94
Installing an iDRAC6 Enterprise Card	94
Removing an iDRAC6 Enterprise Card	95
VFlash Media (Optional)	96
NIC Hardware Key	97
Cooling Shroud	98
Removing the Cooling Shroud	99
Installing the Cooling Shroud	100
Cooling Fans	100
Removing a Cooling Fan	100
Replacing a Cooling Fan	101
Removing the Fan Bracket	102
Replacing the Fan Bracket	103
Optical Drive	103
Removing the Optical Drive	104
Installing the Optical Drive	104